

**MAX**®

# HN75

**HIGH PRESSURE COIL NAILER**

**HOCHDRUCK-SPULENNAGLER**

**CLOUEUSE À ENROULEMENT À  
HAUTE PRESSION**

**INCHIODATRICE AD AVVOLGIMENTO  
AD ALTA PRESSIONE**

**CLAVADORA DE ENROLLAMIENTO  
DE ALTA PRESIÓN**



**OPERATING and MAINTENANCE MANUAL  
BETRIEBSANLEITUNG  
MANUEL D'UTILISATION et D'ENTRETIEN  
MANUALE DI FUNZIONAMENTO E MANUTENZIONE  
MANUAL DE OPERACIONES Y MANTENIMIENTO**

**▲ WARNING:**

BEFORE USING THIS TOOL, STUDY THIS MANUAL TO ENSURE SAFETY WARNING AND INSTRUCTIONS.  
KEEP THESE INSTRUCTIONS WITH THE TOOL FOR FUTURE REFERENCE.

**▲ ACHTUNG!**

LESEN SIE VOR INBETRIEBNAHME DES GERÄTES DIE GEBRAUCHS- UND SICHERHEITSHINWEISE. BITTE BEWAHREN SIE DIE GEBRAUCHS- UND SICHERHEITSHINWEISE AUF, DAMIT SIE AUCH SPÄTER EINGESEHEN WERDEN KÖNNEN.

**▲ AVERTISSEMENT:**

AVANT D'UTILISER CET OUTIL, LIRE CE MANUEL ET LES CONSIGNES DE SECURITE AFIN DE GARANTIR UN FONCTIONNEMENT SUR.  
CONSERVER CE MANUEL EN LIEU SUR AVEC L'OUTIL AFIN DE POUVOIR LE CONSULTER ULTERIEUREMENT.

**▲ ATTENZIONE:**

PRIMA DI USARE QUESTA MACCHINA, STUDIARE IL MANUALE PER PRENDERE ATTO DEGLI AVVERTIMENTI E DELLE ISTRUZIONI PER LA SICUREZZA.  
TENERE QUESTE ISTRUZIONI INSIEME ALLO STRUMENTO PER CONSULTAZIONI FUTURE

**▲ ATENCIÓN:**

PARA EVITAR GRAVES DAÑOS PERSONALES O EN LA PROPIEDAD.  
ANTES DE EMPLEAR LA HERRAMIENTA, LEER CON ATENCIÓN Y COMPRENDER LOS SIGUIENTES INSTRUCCIONES DE SEGURIDAD.

# INDEX INHALTSVERZEICHNIS INDEX INDICE INDICE

<b>ENGLISH</b>	<b>Page 3 to 15 Page</b>
<b>DEUTSCH</b>	<b>Page 17 to 29 Page</b>
<b>FRANÇAIS</b>	<b>Page 31 to 43 Page</b>
<b>ITALIANO</b>	<b>Page 45 to 57 Page</b>
<b>ESPAÑOL</b>	<b>Page 59 to 71 Page</b>

## **DEFINITIONS OF SIGNAL WORDS**

<b>WARNING:</b>	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
<b>CAUTION:</b>	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
<b>NOTE:</b>	Emphasizes essential information.

## **DEFINITIONEN DER HINWEISBEZEICHNUNGEN**

<b>ACHTUNG!</b>	Zeigt eine eventuell gefährliche Situation an, die den Tod oder schwere Verletzungen zur Folge haben könnte, wenn sie nicht vermieden wird.
<b>VORSICHT!</b>	Zeigt eine eventuell gefährliche Situation an, die leichte oder mittelschwere Verletzungen zur Folge haben könnte, wenn sie nicht vermieden wird.
<b>HINWEIS:</b>	Hebt wichtige Informationen hervor.

## **DÉFINITIONS DES DIFFÉRENTS DEGRÉS D' AVERTISSEMENTS**

<b>AVERTISSEMENT</b>	Indique une situation éventuellement dangereuse qui, si elle n'est pas contournée, pourrait provoquer la mort ou des blessures sérieuses.
<b>ATTENTION</b>	Indique une situation éventuellement dangereuse qui, si elle n'est pas contournée, pourrait provoquer des blessures légères à moyennement sérieuses.
<b>REMARQUE</b>	Souligne des informations importantes.

## **DEFINIZIONE DELLE INDICAZIONI DI AVVERTIMENTO**

<b>ATTENZIONE:</b>	Indica l'eventualità che possa verificarsi una situazione pericolosa, la quale se non viene evitata, può risultare letale o provocare gravi lesioni.
<b>AVVERTENZA:</b>	Indica l'eventualità che possa verificarsi una situazione pericolosa, la quale se non viene evitata, può provocare lesioni di lieve o media entità.
<b>NOTA:</b>	Evidenzia informazioni importanti.

## **DEFINICIÓN DE LAS INDICACIONES DE ADVERTENCIA**

<b>¡ATENCIÓN!</b>	Indica una situación potencialmente peligrosa que podría causar la muerte o graves lesiones si no se evita.
<b>¡PRECAUCIÓN!</b>	Indica una situación potencialmente peligrosa que podría causar lesiones menos graves o leves si no se evita.
<b>NOTA:</b>	Resalta informaciones importantes.

**ENGLISH**

# **HN75**

## **HIGH PRESSURE COIL NAILER**

### **INDEX**

- 1. SAFETY INSTRUCTIONS .....4**
- 2. SPECIFICATIONS &  
TECHNICAL DATA .....7**
- 3. AIR SUPPLY AND CONNECTIONS ...9**
- 4. INSTRUCTIONS FOR OPERATION ...10**
- 5. MAINTAIN FOR PERFORMANCE ...15**
- 6. STORING .....15**
- 7. TROUBLESHOOTING/REPAIRS.....15**

### **OPERATING and MAINTENANCE MANUAL**

 **WARNING:**

BEFORE USING THIS TOOL, STUDY THIS MANUAL TO ENSURE SAFETY WARNING AND INSTRUCTIONS.

KEEP THESE INSTRUCTIONS WITH THE TOOL FOR FUTURE REFERENCE.

## 1. SAFETY INSTRUCTIONS



### **▲ WARNING:**

**TO AVOID SEVERE PERSONAL INJURY OR PROPERTY DAMAGE BEFORE USING THE TOOL, READ CAREFULLY AND UNDERSTAND THE FOLLOWING "SAFETY INSTRUCTIONS". FAILURE TO FOLLOW WARNINGS COULD RESULT IN DEATH OR SERIOUS INJURY.**

### PRECAUTIONS ON USING THE TOOL



#### 1. WEAR SAFETY GLASSES OR GOGGLES

Danger to the eyes always exists due to the possibility of dust being blown up by the exhausted air or of a fastener flying up due to the improper handling of the tool. For these reasons, safety glasses or goggles shall always be worn when operating the tool.

The employer and/or user must ensure that proper eye protection is worn. Eye protection equipment must conform to the requirements of the American National Standards Institute, ANSI Z87.1 (Council Directive 89/686/EEC of 21 DEC. 1989) and provide both frontal and side protection.

The employer is responsible to enforce the use of eye protection equipment by the tool operator and all other personnel in the work area.

**NOTE:** Non-side shielded spectacles and face shields alone do not provide adequate protection.



#### 2. EAR PROTECTION MAY BE REQUIRED IN SOME ENVIRONMENTS

As the working condition may include exposure to high noise levels which can lead to hearing damage, the employer and user should ensure that any necessary hearing protection is provided and used by the operator and others in the work area.



#### 3. WHEN USING THE TOOL, BE SURE TO USE A SPECIAL AIR COMPRESSOR AND AIR HOSE

In order to improve its performance, it has set its working pressure higher than the conventional nailers. To use the tool, you always need the special air compressor and air hose. Use of combustible pressure gas (for example, oxygen, acetylene, etc.) causes abnormal combustion, possibly resulting in explosion. Use only the special air compressor and air hose.



#### 4. OPERATE WITHIN THE PROPER AIR PRESSURE RANGE

The tool is designed to operate within an air pressure range of 170 to 320 p.s.i. (12 to 23 bar.)

The pressure should be adjusted to the type of the work being fastened. The tool shall never be operated when the operating pressure exceeds 320 p.s.i. (23 bar.)



#### 5. DO NOT OPERATE THE TOOL NEAR A FLAMMABLE SUBSTANCE

Never operate the tool near a flammable substance (e.g., thinner, gasoline, etc.). Volatile fumes from these substances could be drawn into the compressor and compressed together with the air and this could result in an explosion.

#### 6. DO NOT USE A WRONG FITTINGS

The connector on the tool must not hold pressure when air supply is disconnected. If a wrong fitting is used, the tool can remain charged with air after disconnecting and thus will be able to drive a fastener even after the air line is disconnected, possibly causing injury.



#### 7. DISCONNECT THE AIR SUPPLY AND EMPTY THE MAGAZINE WHEN THE TOOL IS NOT IN USE

Always disconnect the air supply from the tool and empty the magazine when operation has been completed or suspended, when unattended, moving to a different work area, adjusting, disassembling, or repairing the tool, and when clearing a jammed fastener.



**8. INSPECT SCREW TIGHTNESS**

Loose or improperly installed screws or bolts cause accidents and tool damage when the tool is put into operation. Inspect to confirm that all screws and bolts are tight and properly installed prior to operating the tool.



**9. DO NOT TOUCH THE TRIGGER UNLESS YOU INTEND TO DRIVE A FASTENER**

Whenever the air supply is connected to the tool, never touch the trigger unless you intend to drive a fastener into the work. It is dangerous to walk around carrying the tool with the trigger pulled, and this and similar actions should be avoided.

 


**10. NEVER POINT THE DISCHARGE OUTLET TOWARD YOURSELF AND OTHER PERSONNEL**

If the discharge outlet is pointed toward people, serious accidents may be caused when misfiring. Be sure the discharge outlet is not pointed toward people when connecting and disconnecting the hose, loading and unloading the fasteners or similar operations.

**11. USE SPECIFIED FASTENERS (SEE PAGE 7)**

The use of fasteners other than specified fasteners will cause the tool malfunction. Be sure to use only specified fasteners when operating the tool.



**12. PLACE THE DISCHARGE OUTLET ON THE WORK SURFACE PROPERLY**

Failure to place the discharge outlet of the nose in a proper manner can result in a fastener flying up and is extremely dangerous.



**13. KEEP HANDS AND BODY AWAY FROM THE DISCHARGE OUTLET**

When loading and using the tool, never place a hand or any part of body in fastener discharge area of the tool. It is very dangerous to hit the hands or body by mistake.



**14. DO NOT DRIVE FASTENERS CLOSE TO THE EDGE AND CORNER OF THE WORK AND THIN MATERIAL**

The workpiece is likely to split and the fastener could fly free and hit someone.



**15. DO NOT DRIVE FASTENERS ON TOP OF OTHER FASTENERS**

Driving fasteners on top of other fasteners may cause deflection fasteners which could cause injury.

**16. REMOVING THE FASTENERS AFTER COMPLETING OPERATION**

If fasteners are left in the magazine after the completion of operation, there is the danger of a serious accident occurring prior to the resumption of operation, should the tool be handled carelessly, or when connecting the air fitting. For this reason, always remove all fasteners remaining in the magazine after completion of the operation.

**17. CHECK OPERATION OF THE CONTACT TRIP MECHANISM FREQUENTLY IN CASE OF USING A CONTACT TRIP TYPE TOOL**

Do not use the tool if the trip is not working correctly as accidental driving of a fastener may result. Do not interfere with the proper operation of the contact trip mechanism.



**18. WHEN USING THE TOOL OUTSIDE OR ELEVATED PLACE**

When fastening roofs or similar slanted surface, start fastening at the lower part and gradually work your way up. Fastening backward is dangerous as you may loose your foot place. Secure the hose at a point close to the area you are going to drive fasteners. Accidents may be caused due to the hose being pulled inadvertently or getting caught.

**19. NEVER USE THE TOOL IF ANY PORTION OF THE TOOL CONTROLS (e.g., TRIGGER, CONTACT ARM) IS INOPERABLE, DISCONNECTED, ALTERED OR NOT WOKING PROPERLY**

**20. NEVER ACTUATE THE TOOL INTO FREE SPACE**

This will avoid any hazard caused by free flying fasteners and excessive strain of the tool.

**21. ALWAYS ASSUME THAT THE TOOL CONTAINS FASTENERS**

**22. RESPECT THE TOOL AS A WORKING IMPLEMENT**

**23. NO HORSEPLAY**

**24. NEVER LOAD THE TOOL WITH FASTENERS WHEN ANY ONE OF THE OPERATING CONTROLS (e.g., TRIGGER, CONTACT ARM) IS ACTIVATED**


---

**OBSERVE THE FOLLOWING GENERAL CAUTION IN ADDITION TO THE OTHER WARNINGS CONTAINED IN THIS MANUAL**

- Do not use the tool as a hammer.
- Always carry the tool by the handle, never carry the tool by the air hose.
- The tool must be used only for the purpose it was designed.
- Never remove, tamper with the operating controls (e.g., TRIGGER, CONTACT ARM)
- Keep the tool in a dry place out of reach of children when not in use.
- Do not use the tool without Safety Warning label.
- Do not modify the tool from original design or function without approval by MAX CO., LTD.

## 2. SPECIFICATIONS AND TECHNICAL DATA

### 1. NAME OF PARTS

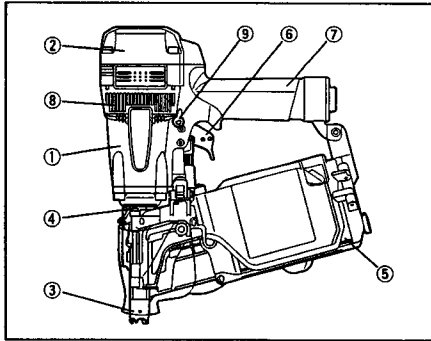

- ① Frame
- ② Cylinder Cap
- ③ Contact Arm
- ④ Nose
- ⑤ Magazine
- ⑥ Trigger
- ⑦ Grip
- ⑧ Exhaust Cover
- ⑨ Trigger Lock Dial

### 2. TOOL SPECIFICATIONS

<b>PRODUCT NO.</b>	HN75
<b>HEIGHT</b>	11-3/4" (298 mm)
<b>WIDTH</b>	5" (129 mm)
<b>LENGTH</b>	11-1/2" (294 mm)
<b>WEIGHT</b>	5.3 lbs. (2.4 kg)
<b>RECOMMENDED OPERATING PRESSURE</b>	170 to 320 p.s.i. (12 to 23 bar)
<b>LOADING CAPACITY</b>	300 Nails
<b>AIR CONSUMPTION</b>	3.4 ℓ at 257 p.s.i. (18 bar) operating pressure

### 3. FASTENER SPECIFICATIONS

NAIL LENGTH	PLASTIC SHEET COLLATED	WIRE WELDED
	1-1/2" to 2-1/2" (38 to 65 mm)	1-3/4" to 3" (45 to 75 mm)
SHANK DIAMETER	.099" to .114" (φ 2.5 to φ 2.9 mm)	.099" to .148" (φ 2.5 to φ 3.8 mm)
SHANK TYPE	Smooth, Screw	Smooth, Ring, Screw
HEAD DIAMETER	.217" to .276" (φ 5.5 to φ 7.0 mm)	.236" to .303" (φ 6.0 to φ 7.7 mm)

#### RECOMMENDED OPERATING PRESSURE:

170 to 320 p.s.i. (12 to 23 bar). Select the operating air pressure within this range for best fastener performance.

**DO NOT EXCEED 320 p.s.i. (23 bar).**

## 4. TECHNICAL DATA

### ① NOISE

A-weighted single-event ----- LWA, 1s, d 97.74 dB  
sound power level

A-weighted single-event ----- LpA, 1s, d 89.82 dB  
emission sound pressure  
level at work station

These values are determined and documented in accordance to EN12549 : 1999.

### ② VIBRATION

Vibration characteristic value = 4.07 m/s<sup>2</sup>

These values are determined and documented in accordance to ISO 8662-11.

This value is a tool-related characteristic value and does not represent the influence to the hand-arm-system when using the tool.  
An influence to the hand-arm-system when using the tool will for example depend on the gripping force, the contact pressure force, the working direction, the adjustment of mains supply, the workpiece, the workpiece support.

## 5. APPLICATIONS

- \* Floor and wall framing
- \* Subflooring
- \* Roof and wall sheathing
- \* Fencing

**▲ WARNING:**

### 3. AIR SUPPLY AND CONNECTIONS

Read section titled "SAFETY INSTRUCTIONS".



#### DO NOT USE ANY POWER SOURCE EXCEPT AN AIR COMPRESSOR

The tool is designed to operate on compressed air. Do not operate the tool on any other combustible gases (e.g., oxygen, acetylene, etc.) since there is the danger of an explosion. For this reason, absolutely do not use anything other than an air compressor to operate the tool.



#### OPERATE WITHIN THE PROPER AIR PRESSURE RANGE

The tool is designed to operate within an air pressure range of 170 to 320 p.s.i. (12 to 23 bar.)

The pressure should be adjusted to the type of the work being fastened. The tool shall never be operated when the operating pressure exceeds 320 p.s.i. (23 bar.)



#### DO NOT OPERATE THE TOOL NEAR A FLAMMABLE SUBSTANCE

Never operate the tool near a flammable substance (e.g., thinner, gasoline, etc.). Volatile fumes from these substances could be drawn into the compressor and compressed together with the air and this could result in an explosion.


#### DO NOT USE A WRONG FITTINGS

The connector on the tool must not hold pressure when air supply is disconnected. If a wrong fitting is used, the tool can remain charged with air after disconnecting and thus will be able to drive a fastener even after the air line is disconnected, possibly causing injury.



#### DISCONNECT THE AIR SUPPLY AND EMPTY THE MAGAZINE WHEN THE TOOL IS NOT IN USE

Always disconnect the air supply from the tool and empty the magazine when operation has been completed or suspended, when unattended, moving to a different work area, adjusting, disassembling, or repairing the tool, and when clearing a jammed fastener.

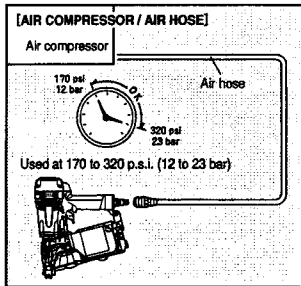

#### WHEN USING THE TOOL, BE SURE TO USE A SPECIAL AIR COMPRESSOR AND AIR HOSE.

In order to improve its performance, it has set its working pressure higher than the conventional nailers. To use the tool, you always need the special air compressor and air hose (MAX PowerLite Compressor and MAX PowerLite Hose). Use of high-pressure gas (for example, oxygen, acetylene, etc.) causes abnormal combustion, possibly resulting in explosion. Use only the special air compressor and air hose.

#### NOTE:

Frequent, but not excessive, lubrication is required for the best performance. Oil added thru the air line connection will lubricate the internal parts.

## 4. INSTRUCTIONS FOR OPERATION

Read section titled "SAFETY INSTRUCTIONS".

### 1. BEFORE OPERATION

- 1 Wear Safety Glasses or Goggles.
- 2 Do not connect the air supply.
- 3 Inspect screw tightness.
- 4 Check operation of the contact arm & trigger if moving smoothly.
- 5 Connect the air supply.
- 6 Check the air-leakage. (The Tool must not have the air-leakage.)
- 7 Hold the Tool with finger-off the trigger, then push the contact arm against the work-piece. (The tool must not operate.)
- 8 Hold the Tool with contact arm free from work-piece and pull the trigger. (The Tool must not operate.)
- 9 Disconnect the air supply.

### ▲ WARNING:



### 2. OPERATION

#### Wear safety glasses or goggles

Danger to the eyes always exists due to the possibility of dust being blown up by the exhausted air or of a fastener flying up due to the improper handling of the tool. For these reasons, safety glasses or goggles shall always be worn when operating the tool.

The employer and/or user must ensure that proper eye protection is worn. Eye protection equipment must conform to the requirements of the American National Standards Institute, ANSI Z87.1 (Council Directive 89/686/EEC of 21 DEC. 1989) and provide both frontal and side protection.


The employer is responsible to enforce the use of eye protection equipment by the tool operator and all other personnel in the work area.

**NOTE:** Non-side shielded spectacles and face shields alone do not provide adequate protection.

### ▲ WARNING:




Keep hands and body away from the discharge outlet when driving the fasteners because of dangerous of hitting the hands or body by mistake.

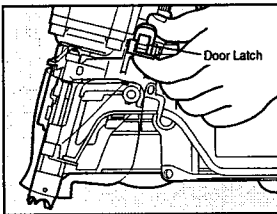

### NAIL LOADING


#### ① Open the Magazine:

Pull up Door Latch and swing Door open. Swing Magazine Cover open.

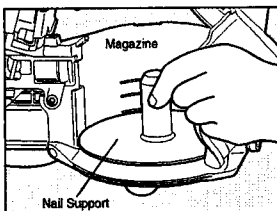


#### ② Check adjustment:

The Nail Support can be moved up and down to four settings. To change setting pull up on the Nail Post and twist to the correct step. The Nail Support should be adjusted correctly to the position indicated in inches and millimeters inside Magazine.

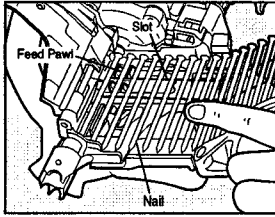

③ Nail loading:

Place a coil of nails over the Nail Post in the Magazine. Uncoil enough nails to reach the Feed Pawl, and place the second nail between the teeth on the Feed Pawl. The nail heads fit in slot on Nose.

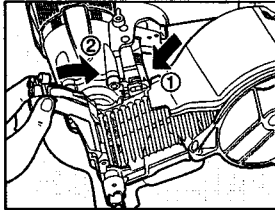

④ Swing Magazine Cover closed.

⑤ Close the Door.

Check that Door Latch engages. (If it does not engage, check that the nail heads are in the slot on the Nose).

**TEST OPERATION**


- ① Adjust the air pressure at 170 p.s.i. (12 bar) and connect the air supply.
- ② Without touching the Trigger, depress the Contact Arm against the work-piece. Pull the Trigger. (The tool must fire the fastener.)
- ③ With the tool off the work-piece, pull the Trigger. Then depress the Contact Arm against the work-piece. (The tool must fire the fastener.)
- ④ Adjust the air pressure as much as the lowest possible according to the diameters and length of fastener and the hardness of work-piece.

**MODEL IDENTIFICATION**

**CONTACT TRIP**

The common operating procedure on "Contact Trip" tools is for the operator to contact the work to actuate the trip mechanism while keeping the Trigger pulled, thus driving a fastener each time the work is contacted. This will allow rapid fastener placement on many jobs, such as sheathing, decking and pallet assembly.

All pneumatic tools are subject to recoil when driving fasteners. The tool may bounce, releasing the trip, and if unintentionally allowed to recontact the work surface with the Trigger still actuated (finger still holding Trigger pulled) an unwanted second fastener will be driven.

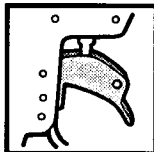

**CONTACT TRIP WITH ANTI-DOUBLE FIRE MECHANISM**


(US patent 5597106, UK patent 2286790)

Identified by RED TRIGGER.

### SEQUENTIAL TRIP

The Sequential Trip requires the operator to hold the tool against the work before pulling the Trigger. This makes accurate fastener placement easier, for instance on framing, toe nailing and crating applications. The Sequential Trip allows exact fastener location without the possibility of driving a second fastener on recoil, as described under "Contact Trip".

The Sequential Trip Tool has a positive safety advantage because it will not accidentally drive a fastener if the tool is contacted against the work-or anything else-while the operator is holding the trigger pulled.

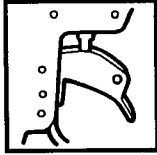


### SEQUENTIAL TRIP

Identified by **ORANGE TRIGGER**.

### CONTACT FIRE OPERATION (CONTACT TRIP)

For contact fire operation, hold the Trigger and depress the Contact Arm against the work surface.

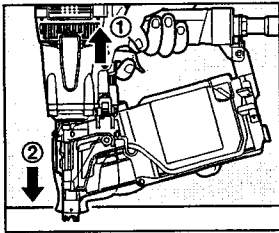


#### PROCEDURE

- ① Hold the Trigger.
- ② Depress the Contact Arm.


### SINGLE FIRE OPERATION (ANTI-DOUBLE FIRE MECHANISM AND SEQUENTIAL TRIP)

For single fire operation, depress the Contact Arm against the work surface and pull the Trigger. Tool can not fire a second nail until the Trigger is released and tool can cycle.

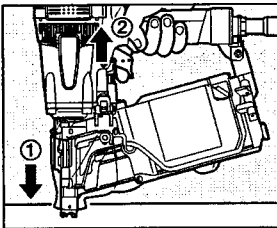

#### PROCEDURE

- ① Depress the Contact Arm.
- ② Pull the Trigger.

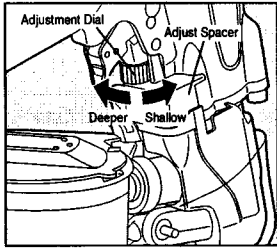


### DRIVING DEPTH ADJUSTMENT DIAL

**▲ WARNING:**


**ALWAYS disconnect air supply before adjustment dial.**

- ① With air pressure set, drive nails into a representative material sample to determine if adjustment is necessary.
- ② If adjustment is required, disconnect air supply.
- ③ Refer to the mark on the Adjust Spacer for direction to turn the adjustment dial.
- ④ Reconnect air supply.

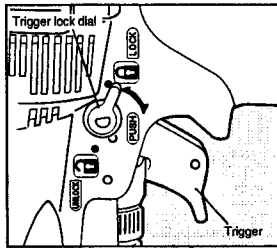

### TRIGGER LOCK MECHANISM

The tool is equipped with a Trigger Lock Mechanism. Push and rotate the Trigger LOCK to the Trigger UNLOCK position before driving nails.

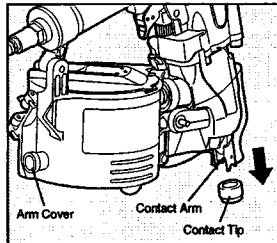

### CONTACT TIP

**▲ WARNING:**

**ALWAYS disconnect air supply before attaching / detaching the contact tip.**

Attach the Contact Tip on the tip of Contact Arm, when driving nails to a soft material.

The Contact Tip can be kept on the Arm Cover when not using.

## WHEN USING THE TOOL FOR STEEL PLATES

### ⚠ WARNING:

- Carry out work based on the required Work Standards.
- If there is no specified work standard, refer the following as a reference.
- Never use the nails for the ceilings (ceiling foundations included) or roofs (roof foundations included).
- Be sure to apply discharge outlet to an object at a right angle.
- Do not drive the nails into the steel plate directly.

This tool is exclusively designed for 1.6 mm (1/16") to 3.2 mm (1/8") thick light gage steel.

When using it, comply with the Work Standards, considering the object condition and work site environment.


① Select appropriate nails according to the object thickness, seeing the right table.

※ The nails may not be driven into the object depending on its hardness or thickness.

※ If the object is thinner than an appropriate range of thickness, the nails may not be driven into it because of being bent.

### Nail Selection Criteria

Diamete	Length	Object thickness (Total) range	Light gage steel thickness
2.5mm (.099")	45mm (1-3/4")	25 to 35mm (1" to 1-3/8")	1.6 to 2.3mm (16 Gage to 13 Gage)
2.5mm (.099")	50mm (2")	25 to 40mm (1" to 1-1/2")	1.6 to 2.3mm (16 Gage to 13 Gage)
2.5mm (.099")	57mm (2-1/4")	35 to 45mm (1-3/8" to 1-3/4")	1.6 to 2.3mm (16 Gage to 13 Gage)
2.5mm (.099")	60mm (2-3/8")	40 to 55mm (1-1/2" to 1-1/8")	1.6 to 2.3mm (16 Gage to 13 Gage)

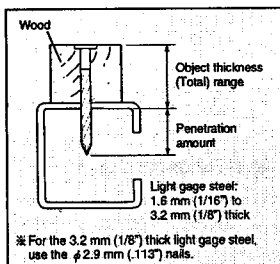

② If the thickness of the light gage steel foundations material used is 3.2 mm (1/8"), use the φ2.9 mm (.113") nails.

③ Never drive the nails directly into the light gage steel because they will fly off, endangering you.

④ Be sure to apply the discharge outlet to the object at a right angle. If applied obliquely, the nails will fly off, endangering you.

⑤ Never use the nails for the roofs (roof foundations included) or ceilings (ceiling foundations included).

⑥ If the nails are driven into the steel plate too deeply, their holding force will be extremely reduced. When working with the tool, fully check the driven conditions.

## 5. MAINTAIN FOR PERFORMANCE

### ❶ DO NOT FIRE THE NAILER WHEN IT IS EMPTY

### ❷ USE RECOMMENDED OIL

The velocite or turbine oil should be used to lubricate the tool. Upon completion of operations, place 2 or 3 drops of oil into the air plug inlet with the jet oiler. (Recommended Oil : ISO VG32)

### ❸ INSPECT AND MAINTAIN DAILY OR BEFORE OPERATION

#### **WARNING:**

Disconnect air supply and empty the magazine when inspecting or maintaining the tool.


- (1) Drain air line filter and compressor
- (2) Keep lubricator filled in air 3-pieces set
- (3) Clean filter element of air 3-pieces set
- (4) Tighten all screws
- (5) Keep contact arm moving smoothly

## 6. STORING

- ❶ When not in use for an extended period, apply a thin coat of the lubricant to the steel parts to avoid rust.
- ❷ Do not store the tool in a cold weather environment. Keep the tool in a warm area.
- ❸ When not in use, the tool should be stored in a warm and dry place. Keep out of reach of children.
- ❹ All quality tools will eventually require servicing or replacement of parts because of wear from the normal use.

## 7. TROUBLE SHOOTING/REPAIRS

The troubleshooting and/or repairs shall be carried out only by the MAX CO., LTD. authorised distributors or by other specialists.

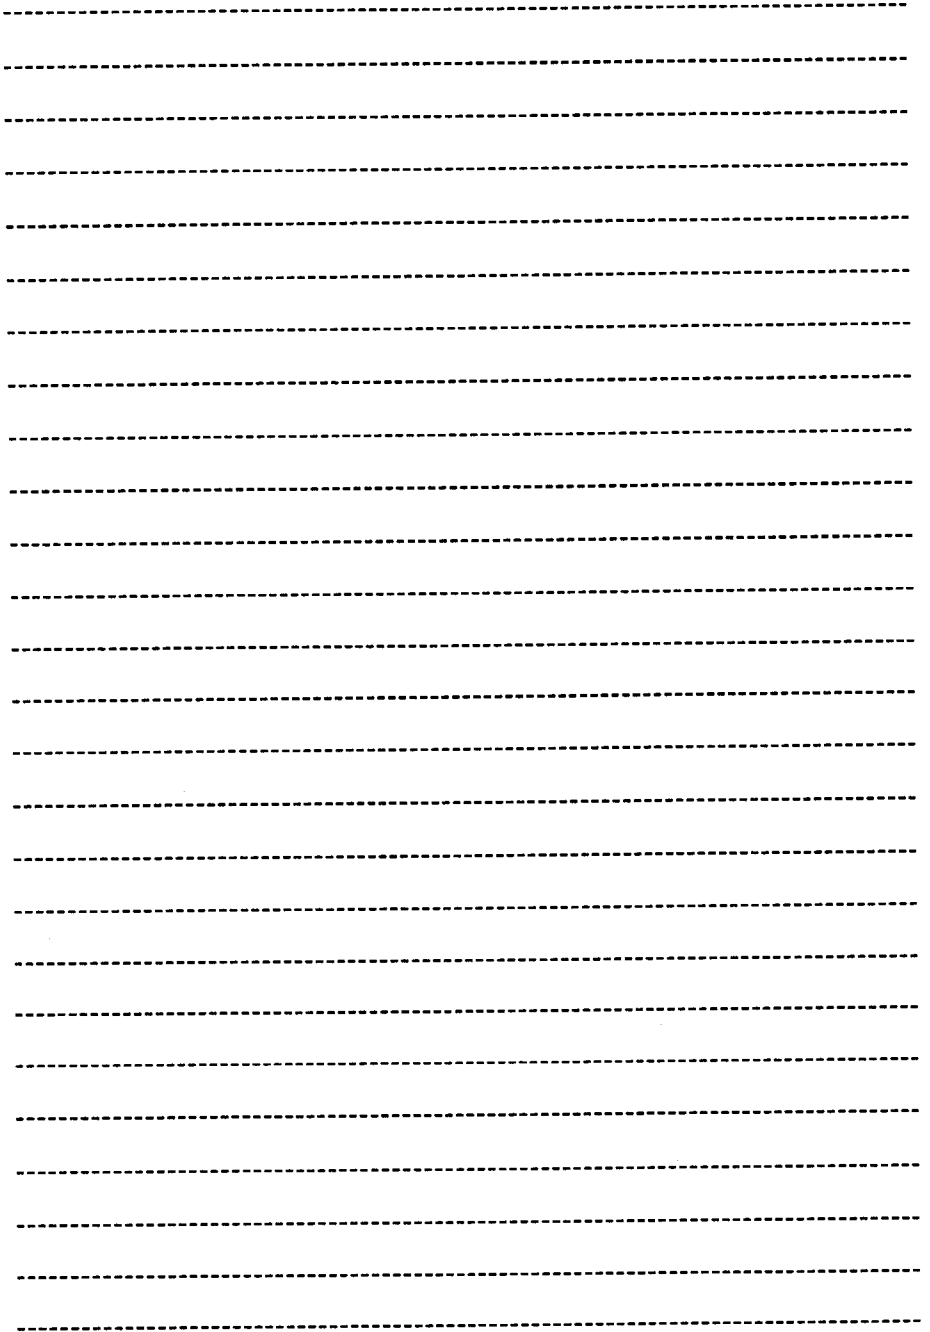

**DEUTSCH**

# HN75

## HOCHDRUCK-SPULENNAGLER

### INHALTSVERZEICHNIS

1. SICHERHEITSHINWEISE .....18
2. TECHNISCHE DATEN  
UND ZUBEHÖR .....21
3. LUFTDRUCKKOMPRESSOR  
UND ANSCHLÜSSE .....23
4. BETRIEBSVORSCHRIFTEN .....24
5. WARTUNG, PFLEGE .....29
6. AUFBEWAHRUNG .....29
7. STÖRUNGSBESEITIGUNG .....29

### BETRIEBSANLEITUNG

**▲ ACHTUNG:**

LESEN SIE VOR INBETRIEBNAHME DES GERÄTES DIE GEBRAUCHS- UND SICHERHEITS-  
HINWEISE. BITTE BEWAHREN SIE DIE GEBRAUCHS- UND SICHERHEITSHINWEISE AUF,  
DAMIT SIE AUCH SPÄTER EINGESEHEN WERDEN KÖNNEN.